

Plancha seca




PK-610PL

*Gracias por
preferirnos*

Estimado cliente

Para lograr el mejor rendimiento de su producto, lea atentamente este manual de instrucciones antes de usarlo y guárdelo para futuras referencias.

1. Identificación de piezas:

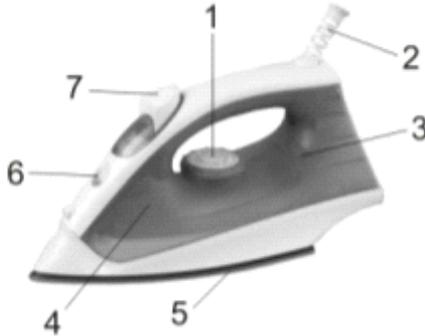

1. Dial de control de temperatura
2. Protector de cable
3. Luz piloto
4. Cuerpo principal
5. Suela Inoxidable
6. Entrada de agua
7. Pulsador de rociado

Importante

- Asegúrese de que el voltaje indicado en la placa del producto es el mismo que en su hogar.
- La plancha siempre se debe apagar antes de enchufar o desenchufar del toma corriente.
- Nunca tire el cable para desconectarlo de la toma de corriente; agarre el enchufe y tire para desconectar.
- Nunca utilice el aparato si tiene cualquier daño visible.
- Cuando deje la plancha sin atender, incluso corto tiempo, desenchúfela de la toma de corriente.
- El uso por niños requiere supervisión de un adulto responsable, en forma permanente.

- No deje la plancha encendida sin supervisar sobre una tabla de planchar.
- Nunca sumerja la plancha en agua.
- Siempre posicione la plancha con la espalda de la plancha sobre una superficie plana y firme al interrumpir el planchado y después de su uso.
- Para mantener la suela sin rayas, evitar el contacto con objetos duros o de metal.
- El cable no debe tocar la suela cuando está caliente.
- Su plancha está diseñada para descansar sobre la espalda, con la suela en posición vertical. No deje la plancha desatendida cuando esté encendida.
- Cuando se utiliza la plancha por primera vez probar en una pieza vieja de tela para asegurarse de que la placa de la suela está completamente limpia.
- Este aparato no está destinado a ser utilizado por personas (incluidos niños) con capacidades físicas, sensoriales o mentales reducidas, o falta de experiencia y conocimientos, a menos que hayan recibido supervisión o instrucción sobre el uso del aparato por parte de una persona responsable de la seguridad.
- Los niños deben ser supervisados para asegurarse de que no jueguen con el aparato.
- La plancha debe utilizarse descansando sobre una superficie estable.
- Cuando coloque la plancha en su soporte, asegúrese de que la superficie en la que se coloca el soporte también es estable.
- La plancha no se debe utilizar si se ha caído, si hay signos visibles de daño o si tiene fugas.
- Si el cable de alimentación está dañado, debe ser sustituido por el Servicio Técnico PUNKTAL, o un agente de servicio calificado de forma similar, para evitar un peligro.

2. Llenado con agua

Asegúrese de que la plancha esté desconectada de la fuente de alimentación.

Llenar con agua a través de la entrada de llenado de agua. (No exceda la marca de nivel principal en el tanque de agua.)

3. Ajuste de temperatura

*Sintéticos-Seda

**Lana

***Algodón-Lino

- Ubique la plancha en posición vertical o parada
- Ajuste el control de temperatura a la temperatura de planchado.
- Inserte el enchufe de red en la toma de corriente.
- Después de que la luz indicadora se ha apagado y se ha vuelto a encender, puede empezar a planchar. La luz indicadora se apagará de vez en cuando durante el planchado.

4. Planchado en seco o con spray

- Ajuste la altura de la tabla de planchar para que el mango de la plancha esté al mismo nivel que el codo. No es necesario presionar la plancha cuando la temperatura se ha ajustado correctamente. El planchado es más eficaz si la ropa está ligeramente húmeda. Oprima el botón de Spray para humedecer la zona a ser planchada.

5. Almacenamiento

- Retire el enchufe de red de la toma de corriente.
- Saque el agua restante del depósito de agua.
- Ponga la plancha en posición vertical y déjela enfriar lo suficiente.

6. Limpieza

- Antes de limpiar la plancha, asegúrese de que está desconectada de la fuente de alimentación y se ha enfriado por completo.
- Los depósitos en la suela pueden retirarse con un paño áspero empapado en una solución de vinagre/agua.
- La fundición puede limpiarse con un paño húmedo y luego pulirse con uno seco.
- No utilice abrasivos en la suela.
- Mantenga la suela lisa. Evite el contacto duro con objetos metálicos.

Atención:


Este aparato puede ser utilizado por niños a partir de 8 años y personas con capacidades sensoriales o mentales físicas reducidas o falta de experiencia y conocimientos si se les ha dado supervisión o instrucción sobre el uso del aparato de una manera segura y entienden los peligros involucrados, los niños no deben jugar con el aparato. La limpieza y el mantenimiento del usuario no deben ser realizados por niños sin supervisión.

Mantenga la plancha y su cable fuera del alcance de los niños menores de 8 años cuando esté energizado o enfriándose.

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

1. PARTS IDENTIFICATION:

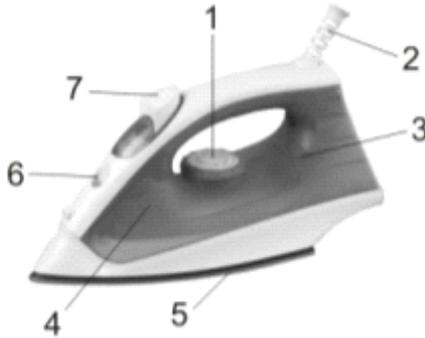

1. Control Dial
2. Cord protector
3. Pilot Light
4. Main Body
5. Soleplate
6. Water inlet
7. Spray button

IMPORTANT

- Ensure the voltage on the type plate is the same as that in your home.
- The iron should always be turned to off before plugging or unplugging from the wall socket.
- Never yank the cord to disconnect from the wall socket; instead, grasp plug and pull to disconnect.
- Never use the appliance if damaged in anyway.
- When leaving, even when only for a short while, always unplug the iron.
- Close supervision is necessary for any appliance being used by or near children.

- Do not leave the iron unattended while connected or on an ironing board.
- Never immerse the iron in water.
- Always place the iron with its back on a firm flat surface when interrupting ironing and after use.
- Keep the sole plate smooth, avoid hard contact with a metal object.
- The cord should not be allowed to touch the sole plate when it is hot.
- Your iron is designed to rest on the heel. Do not leave the iron unattended when switched on.
- Do not place the iron on an unprotected surface even if it is on its heel rest.
- When using the iron for the first time test on an old piece of fabric to ensure the sole plate is completely clean.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for the safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The iron must be used while rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified in order to avoid a hazard.

2. FILLING WITH WATER

Ensure the iron is disconnected from the power supply.

Turn the steam control knob to position "0" Fill with water through water filling inlet.
(Do not exceed main level mark on the water tank.)

3. SETTING THE TEMPERATURE

****Synthetics-Silk**

****wool**

****Cotton-Linen**

- Stand the iron upright
- Set temperature control to ironing temperature.
- Insert the mains plug into the main supply.
- After the indicator light has gone out and come on again, you may start ironing. The indicator light will go out from time to time during ironing.

4. DRY IRONING

- Adjust the height of the ironing board so that the handle of the iron is on the same level as your elbow. Pressing onto the iron is not necessary if the temperature has been set correctly. Ironing is most effective if the laundry is slightly damp.

5. STORAGE

- Remove the mains plug from the wall socket.
- Pour any remaining water out of the water reservoir.
- Set the steam knob to no steam position.
- Stand the iron upright and let it cool down sufficiently.

6. CLEANING

- Before cleaning the iron ensure it is disconnected from the power supply and has completely cooled down.
- Deposits on the sole plate may be removed with a rough cloth soaked in a vinegar/water solution.
- The casing may be wiped with a damp cloth and then polished with a dry one.
- Do not use abrasives on the sole plate.
- Keep the sole plate smooth. Avoid hard contact with metal objects.

ATTENTION:

This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Keep the iron and its cord out of reach of children less than 8 year of age when it is energized or cooling down.

PK-610PL
Datos técnicos

Voltaje: 220-240V 50Hz

Potencia: 1000W



*Gracias por
preferirnos*

Importador en Uruguay
PUNKTAL S.A.

SERVICIO OFICIAL PUNKTAL
Calle Cuareim 1544
Montevideo Uruguay
Tel: 598 29003538
service@punktal.com.uy