

Caloventilador 2 en 1



PK-3400CF

*Gracias por
preferirnos*



ESPAÑOL

Lea atentamente las instrucciones antes de utilizar el aparato

ADVERTENCIAS DE SEGURIDAD

1. No cubra el calefactor del ventilador en ningún momento durante el funcionamiento.
2. No lo cuelgue en la pared.
3. No lo use en la alfombra con pelusa larga.
4. No use el calefactor en las inmediaciones de un baño, una ducha o una piscina.
5. No inserte bastones ni ningún otro objeto en la entrada de aire o en la salida del aparato.
6. No coloque el aparato inmediatamente debajo de una toma de corriente.
7. No ponga el aparato cerca de un fuego.
8. Mantenga a los niños alejados del calefactor.
9. Mantenga los objetos inflamables y explosivos lejos del calefactor.
10. En caso de un mal funcionamiento o funcionamiento anormal, no intente abrir o reparar el aparato en su hogar, envíe el calefactor al agente de servicio designado para su inspección y reparación.
11. Si el cable de alimentación está dañado, debe ser reemplazado por el agente de servicio designado o una persona con calificaciones similares.

IMPORTANTE

1. Compruebe si la tensión eléctrica de la fuente de alimentación principal y la carga del enchufe coinciden con la tensión nominal y la potencia marcadas en la etiqueta de clasificación del aparato.
2. Compruebe si el zócalo y el enchufe no están dañados, y coloque el enchufe bien en el zócalo.
3. Coloque el aparato sobre una superficie estable y plana, sin riesgo de caerse.
4. Asegúrese de que haya suficiente espacio para el calefactor del ventilador mientras está funcionando, al menos 50 cm alrededor del aparato, y justo antes de la salida de aire, la distancia debe ser de al menos 120 cm.

FUNCIONAMIENTO

1. Gire el interruptor del termostato al valor mínimo, al mismo tiempo, gire el interruptor de selección de calor a la posición "O"

2. Enchufe el aparato y gire el interruptor del termostato a la posición máxima. Luego gire el interruptor de selección de calor para elegir aire o aire caliente y la temperatura del aire caliente como se muestra a continuación. Mientras trabaja, la luz indicadora estará encendida.

2.1 Gire el interruptor de selección de calor a la posición "❄️", el calefactor sopla aire frío.

2.2 Gire el interruptor de selección de calor a la posición "I", el calefactor sopla aire caliente, trabajando a 1000W.

2.3 Gire el interruptor de selección de calor a la posición "II", el calefactor sopla aire caliente, trabajando a 2000W.

2.4 Gire el interruptor de selección de calor a la posición "O", el calefactor deja de funcionar y la luz indicadora se apagará.


3. Ajuste el interruptor del termostato a la posición adecuada para la temperatura deseada.

3.1 Compruebe si el interruptor del termostato está en la posición máxima.

3.2 Cuando sienta que la temperatura de la habitación es cómoda, gire el interruptor del termostato lentamente hacia la izquierda hasta la posición mínima hasta que el aparato deje de funcionar.

3.3 Luego, el interruptor del termostato mantendrá la temperatura ambiente a la temperatura deseada automáticamente.

3.4 También puede girar el interruptor del termostato hacia la izquierda hasta la posición mínima o girar el interruptor del termostato hacia la derecha hasta la posición máxima para aumentar o disminuir la temperatura.

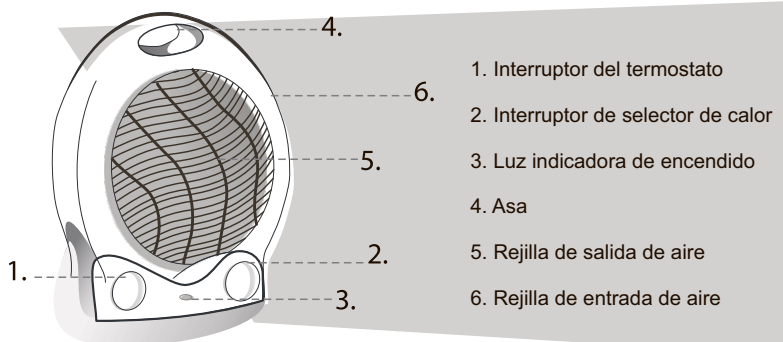

SISTEMA DE SEGURIDAD

1. Para evitar riesgos humanos o daños a los componentes internos, el calefactor tiene un sistema de seguridad que apagará automáticamente el aparato si el calor alcanza el límite de seguridad.

Si se produce sobrecalentamiento:

1.1 Gire el interruptor de selección de calor a la posición "O", gire el interruptor del termostato a la posición mínima y retire el enchufe de la pared.

1.2 Compruebe si el aire fluye suavemente antes de la salida y la entrada, y si el aparato está en la posición correcta.

1.3 Deje que el calefactor del ventilador se enfríe durante 8 a 10 minutos antes de volver a encenderlo.

1.4 Enchufe el aparato y enciéndalo. Si el aparato no funciona normalmente, retire el enchufe de inmediato de la toma de corriente y haga que el calefactor del ventilador sea reparado únicamente por el servicio designado.

MANTENIMIENTO Y LIMPIEZA

1. Antes de apagar el aparato, gire el interruptor de selección de calor a la posición "🌀". Después deje operar durante 3 a 5 minutos para bajar la temperatura interna del aparato, gire el interruptor de selección de calor a la posición "O".

2. Limpie regularmente la entrada de aire y la salida de aire del aparato (al menos dos veces al año).

3. Antes de limpiar el aparato, primero apague el calefactor, luego retire el enchufe de la toma de corriente y espere hasta que el aparato se enfríe.

4. Use un paño húmedo para limpiar la superficie del aparato, evite que entre agua en el interior del aparato, seque el aparato antes de usarlo o almacenarlo.

Electric Fan Heater



PK-3400CF

*Thanks for
prefer us*

ENGLISH

Carefully read the instructions before using the appliance

SAFETY WARNINGS


1. Don't cover the fan heater at any time when operating.
2. Don't hung it on the wall.
3. Don't use it on the carpet with long fluff.
4. Don't use the heater in the immediate surrounding of a bath, a shower or a swimming pool.
5. Don't insert sticks or any other objects to either the air inlet or the outlet of the appliance.
6. Don't put the appliance immediately below a electrical socket.
7. Don't put the appliance near a fire.
8. Keep children away from the heater.
9. Keep flammable and explosive objects away from the heater.
10. In case of malfunction or abnormal operation, don't attempt to open or repair the appliance at home, send the heater to appointed service agent for inspection and repair.
11. If the power cord is damaged, it must be replaced by the appointed service agent or a similarly qualified person.

IMPORTANT

1. Check if the electrical voltage of the main supply and the load of the socket match the rated voltage and power marked on the rating label of the appliance.
2. Check if the socket and the plug are undamaged, and put the plug well in the socket.
3. Put the appliance on a stable and flat surface for no risk of falling down.
4. Be sure that there is enough space for the fan heater while operating, at least 50 cm around the appliance, and right before the air outlet, the distance should be at least 120 cm.

OPERATION

1. Turn the thermostat switch to the minimal value, at the same time turn the heat select switch to the "O" position (see picture).
2. Plug in the appliance, and turn the thermostat switch to the maximum position. Then turn the heat select switch to choose air or warm air and the temperature of warm air as below. While working the indicator light will be on.
 - 2.1 Turn the heat select switch to "I" position, the heater blows cool air.
 - 2.2 Turn the heat select switch to "II" position, the heater blows warm air, working at 1000W.
 - 2.3 Turn the heat select switch to "III" position, the heater blows warm air, working at 2000W.
 - 2.4 Turn the heat select switch to "O" position, the heater stops working, the indicator light will be off.
3. Adjust the thermostat switch to suitable position for desired temperature setting.
 - 3.1 Check if the thermostat switch is on the maximum position.
 - 3.2 When you feel the room temperature comfortable, turn the thermostat switch anti-clockwise slowly to the minimal position until the appliance stops working.
 - 3.3 Then the thermostat switch will keep the room temperature at the desired temperature automatically.
 - 3.4 You can also turn the thermostat switch anti-clockwise to the minimum position or turn the thermostat switch clockwise to maximum position to make the temperature lower or higher.

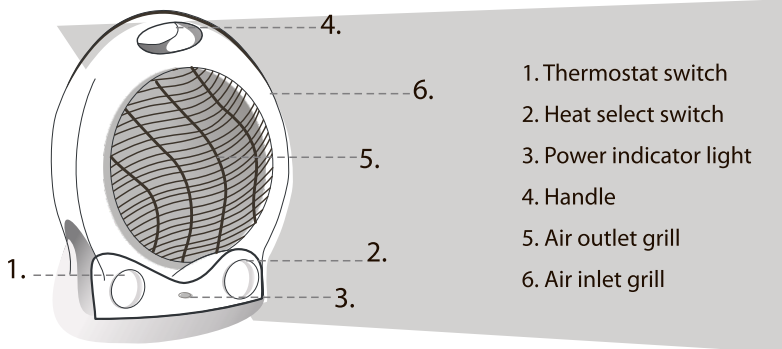

SECURITY SYSTEM

1. To avoid risk to human being or damage to internal components, the fan heater has a security system which will automatically switch off the appliance if the heat reaches the safety limit.

If overheating occurs:

- 1.1 Turn the heat select switch to “O” position, turn the thermostat switch to the minimal position and remove the plug from the socket.
- 1.2 Check if the air flows smoothly before the outlet and inlet, and if the appliance is put in right position. If so, get it in order before restart the appliance.
- 1.3 Let the fan heater cool down for 8 to 10 minutes before you start it again.
- 1.4 Plug in the appliance and switch it on. If the appliance can't operate normally, remove the plug immediately from the socket and have the fan heater serviced by an appointed service only.

MAINTENANCE AND CLEANING

1. Before you turn off the appliance, turn the heat select switch to the “O” position. After operating for 3 to 5 minutes to lower the internal temperature of appliance, then turn the heat select switch to “O” position.
2. Clean the air inlet and air outlet of the appliance regularly (at least twice a year normally).
3. Before you clean the appliance, turn off the heater first, then remove the plug from the socket, and wait until the appliance cools down.
4. Use a damp cloth to clean the surface of appliance, avoid water going inside the appliance, dry the appliance before use or store.

PK-3400CF

Datos técnicos

Potencia: 1000W / 2000W

Voltaje: 220-240V 50-60Hz



Importador en Uruguay
PUNKTAL S.A.

SERVICIO OFICIAL PUNKTAL

Calle Cuareim 1544

Montevideo Uruguay

Tel: 598 29003538

service@punktal.com.uy